

120V / 60Hz
EM83141



Manual de Instrucciones



Plancha de Vapor, rocíado, Seca
y función de autolimpieza

Iron Steam & Dry with Spray
and burst function



Instruction Manual

® Emerson

EM83141
120V / 60Hz

IMPORTANT SAFEGUARDS

When operating your iron, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS.
2. Use iron only for its intended use.
3. To protect against a risk of electrical shock, do not immerse the iron in water or other liquids.
4. The iron should always be turned to OFF before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let iron cool completely before storing. Loop cord loosely around iron when storing.
6. Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
7. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
9. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.
10. If the malfunction indicator goes on, the flatiron is not operating normally, Disconnect from the power supply and have the flatiron serviced by qualified service personnel.

BEFORE USING IRON

Remove any labels from soleplate and wipe any manufacturing residue from soleplate and soleplate vents using a soft cloth and cotton swab.

Si usted tiene planas de usar el botón de vapor, llene el tanque como se indica a continuación:

Para llenar el Tanque del agua

CÓMO USAR LA PLANCHA

Quite las etiquetas de la placa de planchar y límpie su superficie y orificios con un paño suave y pañuelos de algodón.

ANTES DE USAR LA PLANCHA

cosa que no sea agua.

PRECAUCIÓN: Nunca la llene con otra

por la abertura del agua.

ligeramente la plancha y llene el tanque

3. Con una tasa de medidas, incline

indicación de APAGAR (OFF).

del reloj, hasta alinear el V con la

en la posición contraria a las manecillas

de la veleta al regulador de temperatura

nivel estable.

1. Desenchufe la plancha del tomacorriente

eléctrico y ponga la plancha sobre el


tabón de descanso en una superficie de

2. Déle vueltas al regulador de temperatura

en la posición contraria a las manecillas



del reloj, hasta alinear el V con la

en la posición contraria a las manecillas

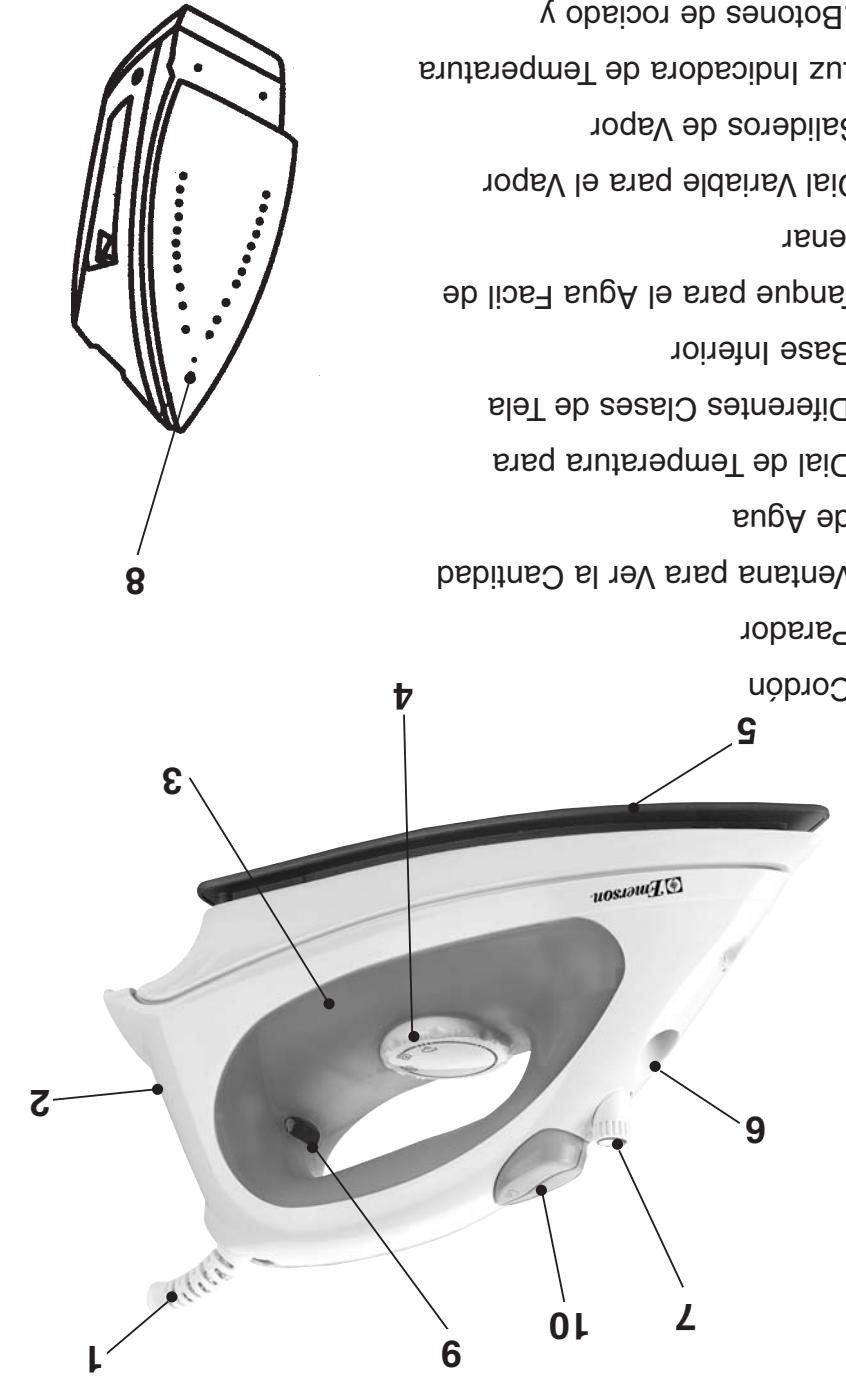

CARACTERÍSTICAS DE SU PLANCHA A VAPOR

FEATURES OF YOUR STEAM IRON

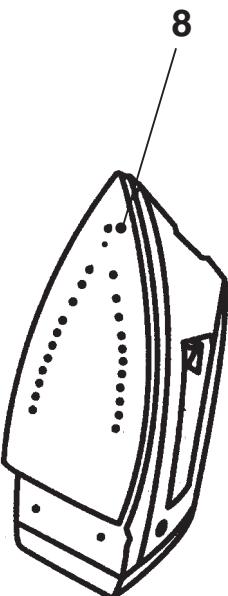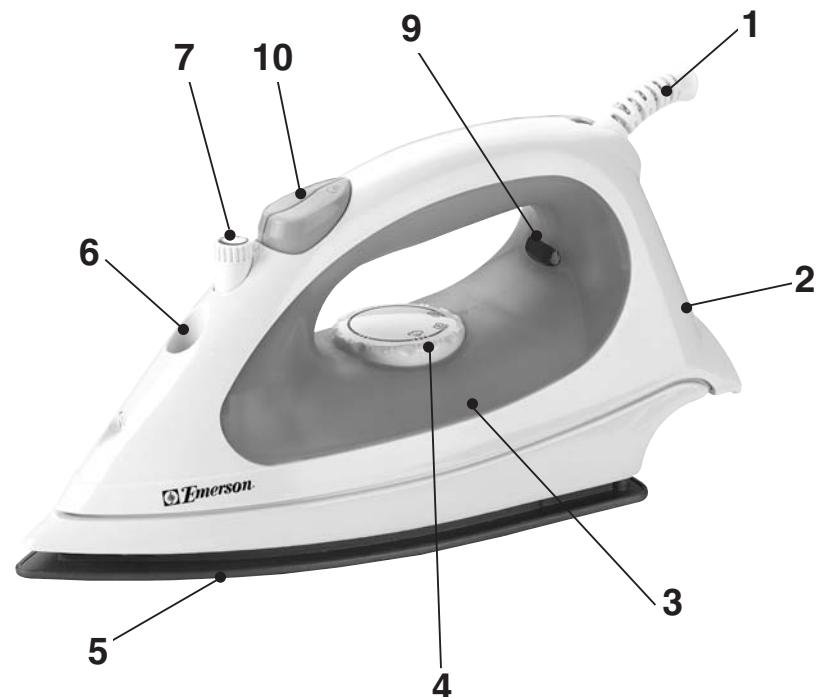

HOW TO USE IRON

Filling Water Tank

If you plan on using Steam features, fill water tank as follows:

1. Unplug iron from electrical outlet and set iron on heel rest on a stable level surface.
 2. Turn temperature dial counterclockwise until V lines up with OFF.
 3. Using a measuring cup, tip iron slightly and fill tank through the water fill hole.

CAUTION: Never fill with anything else but water.

Steam Pressing

1. Fill water tank.
 2. Plug iron into electrical outlet.
 3. Turn steam system dial to desired level.

NOTE: Be sure to check the garment label for instructions. Some fabrics may be damaged when exposed to steam or water.

- Turn the temperature dial clockwise until the V falls within the stream range - WOOL/COTTON/LINEN.

NOTE: Be sure to check the garment label for fiber content and set for the fiber requiring the lowest temperature.

- Set iron on heel rest and wait until ready light *turns on* indicating the soleplate has reached the desired temperature
 - When you are finished ironing, turn temperature dial counterclockwise to OFF and unplug from electrical outlet.

Para planchar al vapor

1. Linea el tandem del agua.
 2. Encufe la Plancha al tomacorriente.
 3. Dele vueltas al regulador del sistema al nivel deseado.

NOTA: Asegúrese de ver las instrucciones para el cuidado en la etiqueta de la prenda de vestir. Algunas telas se pueden dañar cuando se exponen al vapor o al agua.

4. Debe utilizar el reglamento de temperatura en la dirección de las manecillas del reloj hasta que el V caiga dentro de la clasificación de vapor de agua/ALGODÓN/LINO.

5. Ponga la plancha en el talón de descanso y espere hasta que encienda la luz que indica que esta lista, lo cual significa que la cara interior de la plancha ha alcanzado la temperatura deseada. 6. Cuando termine de planchar, déle vueltas al regulador de temperatura en la dirección contraria a las manecillas del reloj hasta la posición de APAgar (OFF) y desenchufela del tomacorriente.


- NOTA: Asegúrate de ver el contenido hasta el mínimo.**

 1. Encuentra en el tomacorriente.
 2. Dele vueltas al regulador del sistema hasta el mínimo.
 3. Dele vueltas al regulador de temperatura hasta el mínimo.


Para planchar en seco

- Ponga la plancha en el escanoso y espere hasta que la luz que indica que se ha escaneado. Luego quite la plancha que indica que se ha alcanzado el deseado.

Clases de Tela
para Diferentes
Dial de Temperatura

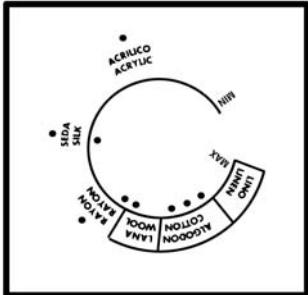

Vapor
Dial Variable para el

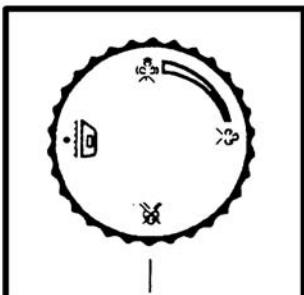

esta sujeción para alcanzar la temperatura establecida.
• La placa de planchar se haya enfriado al planchar y la temperatura

alcanzar la temperatura más baja.
• Se ha puesto el regulador de temperatura a una temperatura más

alta.
La luz se apagará cuando:

asegurará que la placa de planchar se ha enfriado hasta
apague y se encienda de nuevo antes de planchar. Esto le
permite esperar a que la luz que indica que esta lista se
baje, esto indica que la placa de planchar se ha enfriado.

NOTA: Si ha puesto el regulador de temperatura en un nivel más

alta de planchar haya alcanzado la temperatura seleccionada.
La luz se encenderá cuando:

temperatura.

de la placa de planchar en comparación con el ajuste del regulador de
la luz que indica que esta lista muestra el estado de la temperatura

La luz que indica que está lista



(OF) y desenchufela del tomacorriente.
reloj hasta la posición de APAGAR
dirección contraria a las manecillas del
reloj que indica la temperatura en la
al regulador de temperatura en la
5. Cuando termine de planchar, déle vueltas

Dry Pressing

1. Plug into electrical outlet.
2. Turn the system dial to minimum
3. Turn temperature dial clockwise until the V lines up with the desired fabric setting.

NOTE: Be sure to check the garment label for fiber content and set for the fiber requiring the lowest temperature.

4. Set iron on heel rest and wait until ready light turns on indicating the soleplate has reached the desired temperature.
5. When you are finished ironing, turn temperature dial counterclockwise to OFF and unplug from electrical outlet.

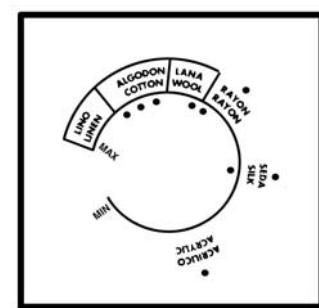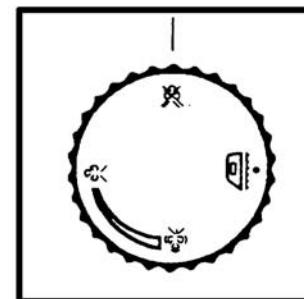

Adjustable Steam
Dial

Fabric / Temperature
Select Dial

Ready Light

The ready light shows the status of the soleplate temperature compared to the temperature dial setting.

The light *will come on* when:

- The soleplate has reached the selected temperature.

NOTE: If you turned the temperature dial to a lower setting, wait until the ready light goes out and comes back on before setting. This will assure you that the soleplate has cooled to the new lower temperature.

The light *will go out* when:

- When the temperature dial has been set for a higher temperature.
- When the soleplate has cooled during ironing and the temperature is increasing to the set temperature.

CARE AND CLEANING

To extend the life and maintain the performance of your iron follow these steps:

Draining and Storing Iron

1. Turn temperature dial to OFF and unplug iron from electrical outlet.
2. With sole plate facing away from you, carefully turn iron upside down over sink to empty water.

CAUTION: Water tank may be hot. Avoid contact with water an steam.

3. Once all the water has been drained in Step 2, hold iron over sink with the soleplate facing down. Remaining drops of water will drain through the soleplate vents. Place the hot iron on its heel rest so that any remaining moisture will evaporate.
4. Do not store iron until the soleplate is completely cool.
5. Loop cord loosely around iron when storing.

3. Una vez que haya escurrido toda el agua como se indica en el segundoo paso, sostenga la plancha sobre el vertedero con la placa de planchar hacia abajo.
4. No guarde la plancha hasta que la placa de planchar se haya enfriado totalmente.

PRECAUCION: El agua del tanque puede estar caliente. Evite el contacto con el agua y el vapor.

1. Ponga el regulador de temperatura en la posición de APAGAR (OFF) y desenchufe la plancha del tomacorriente.
2. Aljeje de usted la plancha de planchar y volteela con cuidado hacia abajo en el vertedero para sacarle el agua.

Para seguir y guardar la plancha siga los siguientes pasos:
Para que la plancha le dure más y le siga funcionando debidamente,